



# Ambulance IT Component Plan

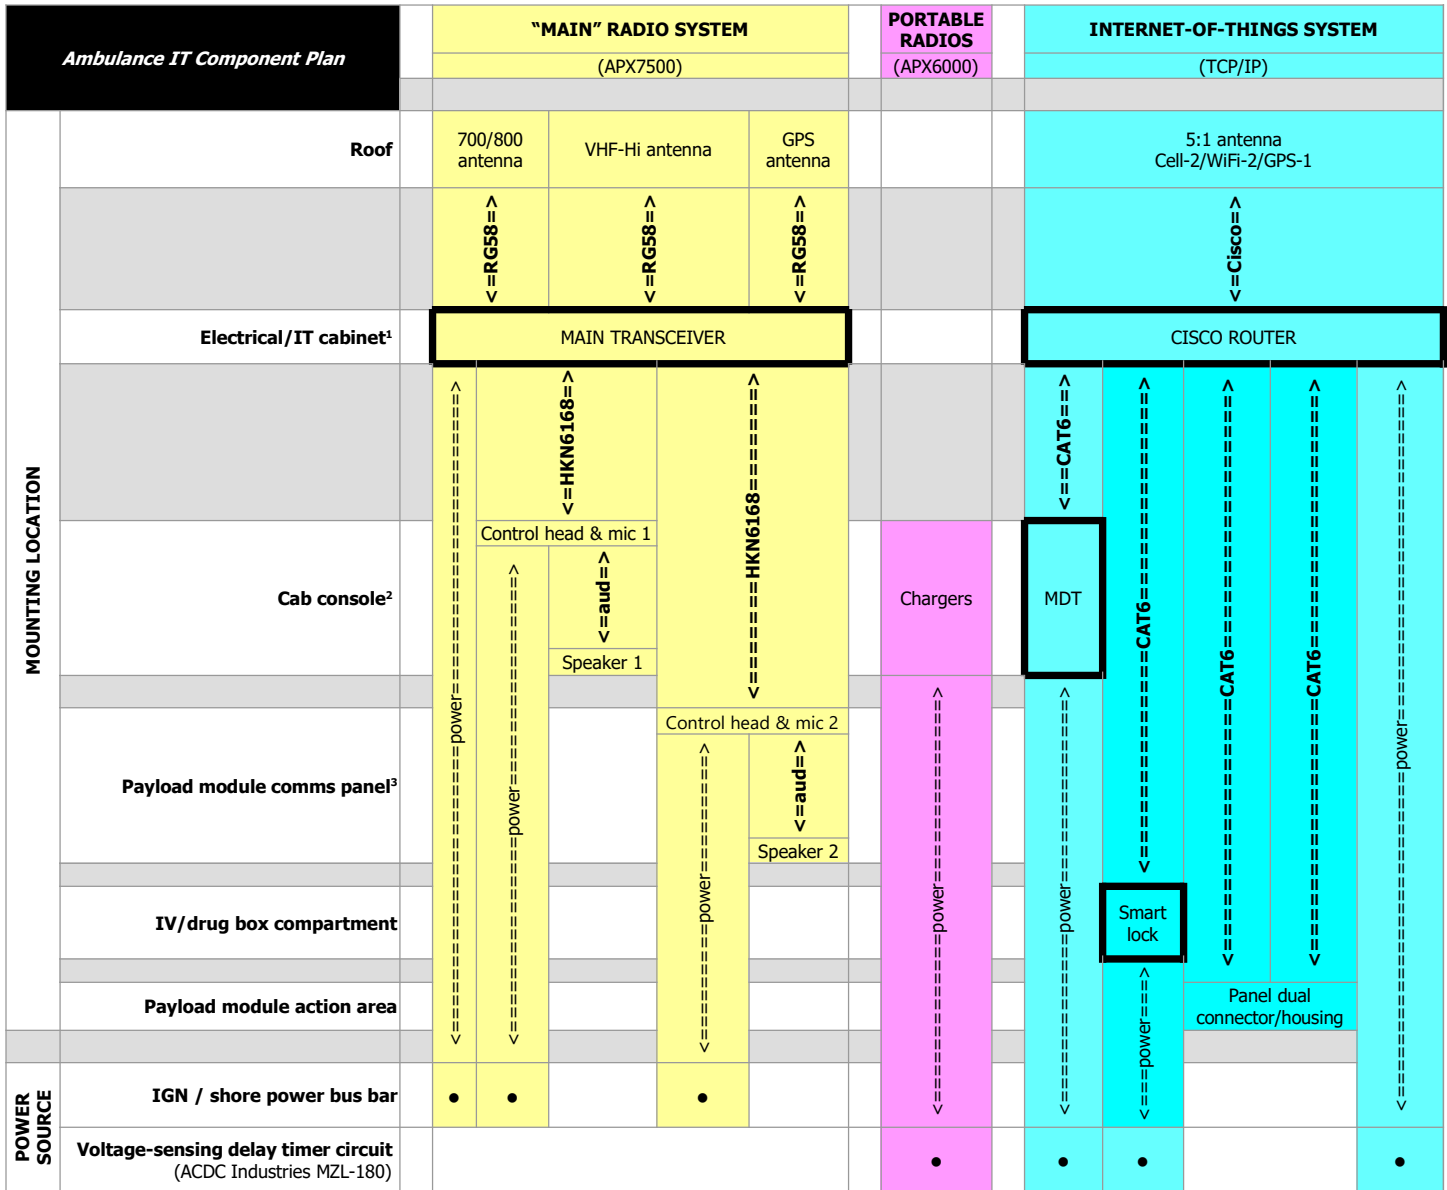

## HOW TO READ THIS CHART

-  indicates a "brain box" with complex electronics and connectors for antennas or user interface components
- <=> indicates a cable run (antenna, power, or signal, as appropriate)
- indicates a power stud or tap

## NOTES

- Mount the voltage-sensing delay timer (ACDC Industries MZL-180) within or near the Electrical/IT cabinet.
- Although none of the components shown are required to take power from the cab console, we recommend providing 12V positive (+) studs on the IGN and MZL-180 circuits, and a ground (-) stud.
- If a 3<sup>rd</sup> control head & mic combo is specified, it should duplicate what is shown here for Control head & mic 2.